

# Anchor System Instructions

---

## How to Get Your Anchor Equipment

- Anchor points are installed at each stall site on the footpath along The Esplanade.
- Pick up your anchor equipment from market staff **as soon as you arrive** on Sunday morning.
- Contact Sunday Market Staff: 📞 0403 604 119

## Permanent vs Casual Traders

- **Permanent Traders:** Keep your anchor set for ongoing use.
- **Casual Traders:** Return your anchor set to **Stall 001** at the end of the day.

## How to Use the Anchor System

You can secure your marquee or umbrella in **two ways**:

### Option 1: Direct Bolt-In Method

- Remove the grub screw protecting the anchor point from dirt. Place them somewhere safe.
- Open your marquee
- Insert the **eye bolt through the foot of your marquee** into each of the four anchor points.

### Option 2: Cam Buckle Tie Method

- Remove the grub screw protecting the anchor point from dirt. Place them somewhere safe.
- Insert the **eye bolt into the anchor point**.
- Open your marquee
- Use **cam buckle ties** to secure your marquee or umbrella **from the inside of the frame to the eye bolt**.

## What You Need

- **Provided by Market** (on your first trade day):
  - 4 x M10-SS Eye Bolts with Collar
  - 1 x Allen Key

**You Must Purchase:** 4 x Cam Buckle Ties (rated to hold 180kg – approx)



## Using the System Safely and Effectively

### General Guidelines

- Only use **cam buckle ties** rated for 180kg.
- If using your own straps, you must provide **engineering documentation** for approval.
- You may stabilise using your back wall **only on high wind days**, but **back anchors must still be used**.

### Extra Stability Tip

- For a stronger hold, connect two cam buckle ties diagonally:
  - One from the **front eye bolt** to the **back of the marquee frame**.
  - Repeat on the opposite side.

### Umbrella Setup

- Use cam buckle ties on **all four corners** of the umbrella frame, securing into the four anchor points.
- 

## Pack-Up Instructions & Safety Tips

1. **Remove Eye Bolts** at the end of the day to avoid trip hazards.
2. **Replace Grub Screws** (flush with concrete) to protect the anchor point.
  - Twist gently by hand first, then use the Allen key.
3. **Avoid releasing cam buckle ties from eye bolts during pack-up:**
  - Instead, **drop your marquee to the ground** first.
4. **Facing the wind?** Bolt one marquee foot in first, then fully extend and secure the rest.
5. **Don't skip grub screw replacement:**
  - Dirt/sand will block the anchor hole.
  - You won't be able to use it next week.
  - Damage may result in charges.

## Option 1: Direct Bolt-In Method

### Anchor system- How to





## Option 2: Cam Buckle Tie Method

